



# Instruction Manual

045 Series Auto, 2 Speed Compact Electric  
Power Unit – SPES45054WPL-115V



**Maximum Operating Pressure – 10,150 psi**



This is a safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid injury or death

## 1.0 Product Information

DURAPAC – 045 Series Auto 2 Speed Power Units are engineered to meet Industrial Standards for Performance and Safety. The SPES45054WPL-115V model delivers 152.5 in<sup>3</sup>/min up to 1,015 psi and 21.35 in<sup>3</sup>/min up to 10,150 psi pressure on double acting cylinders and tools. The power unit has a 4 way solenoid valve and remote pendant to actuate Advance/"A" and "B" port Hold/Retract functions with stacking type pilot-operated check valve fitted on "A" and "B" port lines. Pressure holding on both "A" and "B" ports. The power unit has 115 Volt and is driven by a 0.60 hp, 50/60 Hz single phase electric motor and is ideal for lifting and maintenance applications. The power unit is lightweight, easily portable and has a carry handle integrated into the shroud.

Special skill, knowledge and training may be required for a specific task and the product may not be suitable for all jobs. The user must ultimately make the decision regarding suitability of the product for any given task and assume the responsibility of safety for all in the work area. Contact a Durapac representative if you are unsure of your power unit's suitability for a particular application.

## 2.0 Receiving Instructions

It is recommended prior to use that an inspection be done by qualified personnel and that any missing or damaged parts, decals, warning/safety labels or signs are replaced with Durapac authorized replacement parts only. Any power unit that appears to be damaged in any way, is worn, leaking or operates abnormally should be removed from service immediately until such time as repairs can be made. Any power unit that has been or suspected to have been subject to a shock load should be removed from service immediately until inspected by a Durapac authorized service center. Owners and operators of this equipment should be aware that the use and subsequent repair of this equipment may require specialized training and knowledge.

## 3.0 Safety

Save these instructions. For your safety, read and understand the information contained within. The owner and operator should understand this product and safe operating procedures before attempting to use this product. Instructions and safety information should be conveyed in the operator's native language before use of this product is authorized. Make certain that the operator thoroughly understands the inherent dangers associated with the use and misuse of the product. If any doubt exists as to the safe and proper use of this product as outlined in this factory authorized manual, remove from service immediately.



### **DANGER:**

- To avoid personal injury, keep hands and feet away from work area during operation
- **Do NOT** handle pressurized hoses. Escaping oil under pressure can penetrate the skin causing serious injury. If oil is injected under the skin, see a doctor immediately
- Stay clear of loads supported by hydraulics. A cylinder, when used as a load lifting device, should never be used as a load holding device. After the load has been raised or lowered, it must always be supported mechanically

**WARNING:**

- The system operating pressure must not exceed the pressure rating of the lowest rated component in the system. Install pressure gauges in the system to monitor operating pressure. It is your window to what is happening in the system
- Always wear appropriate personal protective equipment (PPE) when operating hydraulic equipment. The operator must take precaution against injury due to failure of the tool or work piece(s)
- **Do NOT** hold or stand directly in line with any hydraulic connections while pressurizing
- **Do NOT** attempt to disconnect hydraulic connections under pressure. Release all line pressure before disconnecting hoses
- All personnel must be clear before lowering load or depressurizing the system
- **Do NOT** attempt to lift a load weighing more than the capacity of the cylinder

**IMPORTANT:**

- If at any stage, the safety related decals become hard to read, these must be replaced
- Minimum age of the operator must be 18 years. The operator must have read and understood all instructions, safety issues, cautions and warnings before starting to operate the equipment. The operator is responsible for this activity towards other persons
- **Do NOT** lift hydraulic equipment by the hoses or couplers. Use the carrying handle or other means of safe transport
- Hydraulic equipment must only be serviced by a qualified hydraulic technician. For repair service, contact the Durapac authorized service center in your area. To protect your warranty, use only high-quality hydraulic oil

**CAUTION:**

- **KEEP HYDRAULIC EQUIPMENT AWAY FROM FLAMES AND HEAT.** Hydraulic fluid can ignite and burn. Excessive heat will soften packings and seals, resulting in fluid leaks. Heat also weakens hose materials and packings. For optimum performance do not expose equipment to temperatures of 131°F (55°C) or higher. Protect all equipment from weld spatter
- No alteration should be made to this device

### 3.1 Hydraulic Power Units

- **Do** use a gauge or other load measuring instrument to verify load
- **Do NOT** exceed the rated capacity of the power unit or any equipment in the system. Burst hazard exists if connection pressure exceeds rated pressure
- **Do NOT** operate the system with bent or damaged couplers or damaged threads
- **Do NOT** subject the power unit and its components to shock loads
- Use only Durapac approved accessories and components

- **Do NOT** connect to an application which can return more oil to the reservoir than the power unit reservoir can hold
- **Do NOT** connect power unit to a hydraulic system that is powered by another pump

### 3.2 Hydraulic Hoses & Fluid Transmission Lines

- Avoid short runs of straight-line tubing. Straight line runs do not provide for expansion and contraction due to pressure and/or temperature changes
- Reduce stress in tube lines. Long tubing runs should be supported by brackets or clips. Before operating the power unit, connections should be tightened securely and leak-free. Over tightening can cause premature thread failure or high-pressure fittings to burst
- Should a hydraulic hose ever rupture, burst or need to be disconnected, immediately shut off the power unit and release all pressure. Never attempt to grasp a leaking pressurized hose with your hands. The force of escaping hydraulic fluid can inflict injury
- **Do NOT** subject the hose to potential hazard such as fire, sharp objects, extreme heat or cold or heavy impact
- **Do NOT** allow the hose to kink, twist, curl, crush, cut or bend so tightly that the fluid flow within the hose is blocked or reduced. Periodically inspect the hose for wear
- Hose material and coupler seals must be compatible with the hydraulic fluid used. Hoses also must not come in contact with corrosive materials such as battery acid, creosote-impregnated objects and wet paint. Never paint a coupler or hose

**FAILURE TO HEED THESE WARNINGS MAY RESULT IN PERSONAL INJURY AS WELL AS PROPERTY DAMAGE.**

## 4.0 Installation

**⚠ IMPORTANT:** Always secure threaded port connections with high grade, non-hardening pipe thread sealant. Teflon tape can be used if only one layer of tape is used and it is applied carefully, two threads back, to prevent the tape from being introduced into hydraulic system, which could cause jamming of precision-fit parts

**⚠** To avoid power loss between the electrical outlet and the power unit motor, use the shortest possible extension cord

- 4.1 Familiarize yourself with the specifications and illustrations in this owner's manual. Know your power unit, its limitations and how it operates before attempting to use. Refer to the specification chart below or if in doubt, contact a Durapac representative.

| Model Number      | Flow Rate (in <sup>3</sup> /min) |            | hp   | Voltage (1 Ph.) | Hz    | Amps | Usable Oil Capacity (gal) | Max. Pressure Rating (psi) | Solenoid Remote Pendant Function 8 ft | Weight (lbs) |
|-------------------|----------------------------------|------------|------|-----------------|-------|------|---------------------------|----------------------------|---------------------------------------|--------------|
|                   | 1,015 psi                        | 10,150 psi |      |                 |       |      |                           |                            |                                       |              |
| SPES45054WP-115V  | 152.50                           | 21.35      | 0.60 | 115             | 50/60 | 11.0 | 0.5                       | 10,150                     | Adv/Hold/Retract                      | 45.1         |
| SPES45054WPL-115V | 152.50                           | 21.35      | 0.60 | 115             | 50/60 | 11.0 | 1.0                       | 10,150                     | Adv/Hold/Retract                      | 48.4         |

- 4.2 Make hydraulic connections – Clean all areas around the oil port of power unit and cylinder. Clean all hose ends, couplers and union ends. Remove the manifold plug and connect the 3/8" NPTF oil output port with a 10,150 psi hydraulic hose.

- 4.3 Check all system fittings and connections to be sure they are tight and leak free.

- 4.4 Check oil level in reservoir before operating power unit.

- 4.5 Power connection – Confirm the power unit's voltage is the same as the voltage being supplied by the site, the source is a stable supply and that the motor is correctly grounded.

**⚠** Ensure power is switched off prior to connection of hoses and equipment to prevent early pressurization

- 4.6 Remove air from the system – Air can accumulate in the hydraulic system during the initial setup or after prolonged use, causing the cylinder to respond slowly or in an unstable manner. Should removal of air from power unit be required, please follow the steps in 6.2 – Bleeding Air from the System in the Maintenance Section.

## 5.0 Operation



### IMPORTANT:

- Always monitor pressure, load or position using suitable equipment. Pressure may be monitored by means of an optional manifold and gauge. Correct application position can only be determined by the operator of the equipment
- **Never** set the relief valve to a higher pressure than the maximum rated pressure of the power unit. Higher settings may result in equipment damage and/or personal injury
- **Do NOT** remove the relief valve
- **Do NOT** operate a power unit that is disconnected from the application. If operated in this condition, the hose and connections will become pressurized. This increases the chance of a burst hazard. Damage may also occur to the power unit and its components
- This power unit is designed for indoor use, please protect from the elements if used outside

### 5.1 Before Using the Power Unit

- 5.1.1 Check all system fittings and connections to be sure they are tight and leak free.
- 5.1.2 Check oil level in reservoir.
- 5.1.3 Open the oil/air vent by turning it 1/2 turns.

 **CAUTION:** The vent plug must be open whenever the power unit is running

### 5.2 Power Unit Operation

- 5.2.1 Plug in power unit.
- 5.2.2 Depress “A” switch to run the motor and to advance the cylinder (flow to port “A”, port “B” returns flow to the reservoir). The motor stops when “A” switch is released.
- 5.2.3 Depress “B” switch to run the motor and to retract the cylinder (flow to port “B”, port “A” returns flow to the reservoir). The motor stops when “A” switch is released.

 The power unit can hold pressure on both ports “A” and “B” by pilot-operated check valves

### 5.3 Relief Valve Adjustment

All power units contain a factory set internal relief valve to prevent over-pressurization of the system. A deck mounted adjustable pressure relief valve is also included and can be set to lower working pressures (see Item 4, shown in Section 8.1 – High Level Description of Parts).

Turn the adjusting screw a few turns (counterclockwise) to decrease the pressure setting to the desired level. Clockwise rotation of the adjusting screw will increase pressure.

## 6.0 Maintenance



### IMPORTANT:

- Disconnect power supply before disassembly or repair
- Check oil level regularly
- Use only good quality hydraulic fluid. **Do NOT** use brake fluid, transmission fluid, turbine oil, motor oil, alcohol, glycerin etc. Use of anything other than good quality hydraulic oil will void warranty and damage the power unit, hose, and application. We recommend Durapac Hydraulic Oil or equivalent
- Equipment must only be serviced by a qualified hydraulic technician. For repair service, contact your local Durapac authorized service center
- Damage to hydraulic hoses may not be detected during visual inspections. For this reason, Durapac recommends that hydraulic hoses be replaced on a regular basis
- Tighten connections as needed. Use non-hardening pipe thread compound when servicing connections

Dirt, sand, etc. will quickly ruin any hydraulic system. Ensure that couplings are clean and free of foreign matter. After each use, clean couplings and attach dust caps.

Maintenance is required when wear or leakage is noticed. Periodically inspect all components to detect any problem that may require service and maintenance.

### 6.1 Adding Hydraulic Fluid

 **WARNING:** Always add oil with cylinders fully retracted (or extended, if pull cylinders) or the system will contain more oil than the reservoir can hold

- 6.1.1 Depressurize and disconnect hydraulic hose from application/cylinder.
- 6.1.2 With the power unit in its upright, horizontal position, remove the air vent plug located on the top plate of the reservoir.
- 6.1.3 Take out the filling plug.
- 6.1.4 Use a small funnel to fill the oil to within 0.8" of the opening.
- 6.1.5 Bleed air from system if necessary.
- 6.1.6 Wipe up any spilled fluid and reinstall the air vent plug/reservoir cap.

### 6.2 Bleeding Air from the System

- 6.2.1 Repeat Steps 6.1.1 to 6.1.4 (above), if required.
- 6.2.2 Invert cylinder and place at a lower level than the power unit reservoir.
- 6.2.3 Extend and retract the cylinder several times without putting a load on the system. Air will be released into the power unit reservoir.
- 6.2.4 Recheck oil level after removing air.


### 6.3 Changing Hydraulic Fluid

⚠ For best results, change fluid once a year or every 300 hours of use

- 6.3.1 Repeat Steps 6.1.1 to 6.1.3 (above).
- 6.3.2 Pour used fluid into a sealable container.
- 6.3.3 Repeat Steps 6.1.4 to 6.1.6 (above).
- 6.3.4 Dispose of fluid in accordance with local regulations.

### 6.4 Replacing Carbon Brushes

- ⚠ Carbon brushes need to be replaced by a qualified technician
- ⚠ Replace when carbon brush has been worn down to 0.24" in length (as shown below) or every 150 hours of use. When worn, the motor will stop automatically

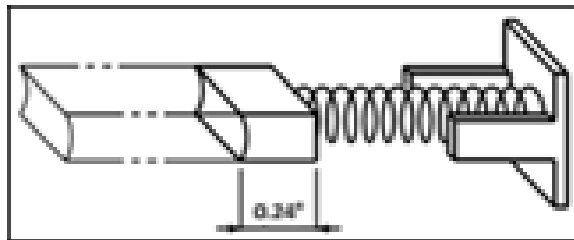

*Fig. 1 – Carbon Brush Replacement*

- 6.4.1 Remove rubber caps (x 2).
- 6.4.2 Use a screwdriver to loosen and remove inside fitting screws so that carbon brushes can be taken out.
- 6.4.3 Replace with new carbon brushes, fix the screws and rubber caps.

### 6.5 Storage

- 6.5.1 When not in use, depressurize and disconnect the power unit from the application.
- 6.5.2 Wipe clean thoroughly and store in a clean, dry environment. Avoid temperature extremes.
- 6.5.3 For transportation or long storage, replace the air vent plug with shipping plug.
- 6.5.4 Shield power unit with a protective cover.

## 7.0 Troubleshooting


**⚠ WARNING:** Disconnect power supply before disassembly or repair

| Problem                                         | Cause                                                   | Solution                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Motor will not start</b>                     | Inadequate or faulty electrical supply                  | <ul style="list-style-type: none"> <li>Check the line voltage</li> <li>Check the condition of the power unit's power cord</li> <li>Check the condition of extension cords</li> <li>Check for tripped circuit breaker. Be sure breaker is of adequate size</li> <li>Contact a qualified electrician for any necessary repairs</li> </ul> |
|                                                 | Carbon brush is worn                                    | <ul style="list-style-type: none"> <li>Refer to 6.4 – Replacing Carbon Brushes</li> </ul>                                                                                                                                                                                                                                               |
| <b>Noisy operation</b>                          | Air trapped in system                                   | <ul style="list-style-type: none"> <li>Check all points where air may leak into the system</li> <li>Refer to 6.2 – Bleeding Air from the System</li> </ul>                                                                                                                                                                              |
|                                                 | Power unit reservoir too full                           | <ul style="list-style-type: none"> <li>Drain fluid to correct level</li> </ul>                                                                                                                                                                                                                                                          |
|                                                 | Low fluid level in power unit reservoir                 | <ul style="list-style-type: none"> <li>Refer to 6.1 – Adding Hydraulic Fluid</li> <li>Fill and bleed the system</li> </ul>                                                                                                                                                                                                              |
| <b>Power unit oil is over-heating</b>           | Oil viscosity is too high                               | <ul style="list-style-type: none"> <li>Refer to 6.3 – Changing Hydraulic Fluid</li> <li>Refill with a good quality hydraulic oil</li> </ul>                                                                                                                                                                                             |
|                                                 | High pressure leakage on upper pressure plate           | <ul style="list-style-type: none"> <li>Tighten plug</li> </ul>                                                                                                                                                                                                                                                                          |
|                                                 | Low fluid level in power unit reservoir                 | <ul style="list-style-type: none"> <li>Refer to 6.1 – Adding Hydraulic Fluid</li> <li>Fill and bleed the system</li> </ul>                                                                                                                                                                                                              |
| <b>Power unit runs but will not pump oil</b>    | Power unit is not primed                                | <ul style="list-style-type: none"> <li>Run power unit a few minutes tipping from side to side</li> </ul>                                                                                                                                                                                                                                |
|                                                 | Externally adjustable relief valve is not correctly set | <ul style="list-style-type: none"> <li>Reset the relief valve to appropriate level</li> </ul>                                                                                                                                                                                                                                           |
|                                                 | Damaged o-ring                                          | <ul style="list-style-type: none"> <li>Send to a Durapac authorized service center for repair</li> </ul>                                                                                                                                                                                                                                |
|                                                 | Defective control valve                                 | <ul style="list-style-type: none"> <li>Send to a Durapac authorized service center for repair</li> </ul>                                                                                                                                                                                                                                |
| <b>Power unit does not reach rated capacity</b> | Low fluid level in reservoir                            | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Depressurize power unit and hose, remove application, then fill and bleed the system</li> </ul>                                                                                                                                                       |
|                                                 | Leaking system components                               | <ul style="list-style-type: none"> <li>Repair or replace as necessary</li> </ul>                                                                                                                                                                                                                                                        |
| <b>Poor performance</b>                         | Fluid level in power unit is low                        | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Depressurize power unit and hose, remove application, then fill and bleed the system</li> </ul>                                                                                                                                                       |

| Problem                                                                                 | Cause                                       | Solution                                                                                                                                                                            |
|-----------------------------------------------------------------------------------------|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Application does not extend, move or respond to pressurized fluid</b>                | Overload condition                          | <ul style="list-style-type: none"> <li>Remedy overload condition</li> </ul>                                                                                                         |
|                                                                                         | Loose couplers                              | <ul style="list-style-type: none"> <li>Tighten couplers</li> </ul>                                                                                                                  |
|                                                                                         | Faulty couplers                             | <ul style="list-style-type: none"> <li>Replace couplers</li> </ul>                                                                                                                  |
|                                                                                         | Malfunctioning power unit                   | <ul style="list-style-type: none"> <li>Contact a Durapac authorized service center for repair</li> </ul>                                                                            |
| <b>Application does not fully extend (cylinder or tools)</b>                            | Reservoir overfilled                        | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Depressurize power unit and hose, remove application, then drain fluid to proper level</li> </ul> |
|                                                                                         | Low fluid level in power unit reservoir     | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Depressurize power unit and hose, remove application, then fill and bleed the system</li> </ul>   |
|                                                                                         | Load above capacity of system               | <ul style="list-style-type: none"> <li>Use correct equipment</li> </ul>                                                                                                             |
| <b>Application responds slower than normal</b>                                          | Loose connection or coupler                 | <ul style="list-style-type: none"> <li>Tighten couplers</li> </ul>                                                                                                                  |
|                                                                                         | Restricted hydraulic line or fitting        | <ul style="list-style-type: none"> <li>Clean and replace if damaged</li> </ul>                                                                                                      |
|                                                                                         | Power unit not operating correctly          | <ul style="list-style-type: none"> <li>Check power unit's operating instructions</li> <li>Repair or replace as necessary</li> </ul>                                                 |
|                                                                                         | Low fluid level in power unit reservoir     | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Depressurize power unit and hose, remove application, then fill and bleed the system</li> </ul>   |
| <b>Application responds to pressurized fluid, but system does not maintain pressure</b> | Leaky connection                            | <ul style="list-style-type: none"> <li>Clean, reseal with thread sealant, and tighten connection</li> </ul>                                                                         |
|                                                                                         | Leaking cylinder seals                      | <ul style="list-style-type: none"> <li>Replace worn seals. Look for excessive contamination or wear. Replace contaminated fluid</li> </ul>                                          |
|                                                                                         | Power unit or valve not operating correctly | <ul style="list-style-type: none"> <li>Contact a Durapac authorized service center for repair</li> </ul>                                                                            |
|                                                                                         | Overload condition                          | <ul style="list-style-type: none"> <li>Remedy overload condition</li> </ul>                                                                                                         |
| <b>Application does not return fluid to power unit (i.e. cylinder will not retract)</b> | Closed release valve                        | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Open release valve</li> </ul>                                                                     |
|                                                                                         | Loose couplers                              | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Tighten couplers</li> </ul>                                                                       |
|                                                                                         | Blocked hydraulic lines                     | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Clean and flush lines</li> </ul>                                                                  |
|                                                                                         | Weak or broken retraction springs           | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Contact a Durapac authorized service center for repair</li> </ul>                                 |
|                                                                                         | Internally damaged cylinder                 | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Contact a Durapac authorized service center for repair</li> </ul>                                 |
|                                                                                         | Power unit reservoir too full               | <ul style="list-style-type: none"> <li><b>Secure load by other means</b></li> <li>Depressurize power unit and hose, remove application, then drain fluid to proper level</li> </ul> |


## 8.0 Parts Breakdown & List

### 8.1 High Level Description of Parts

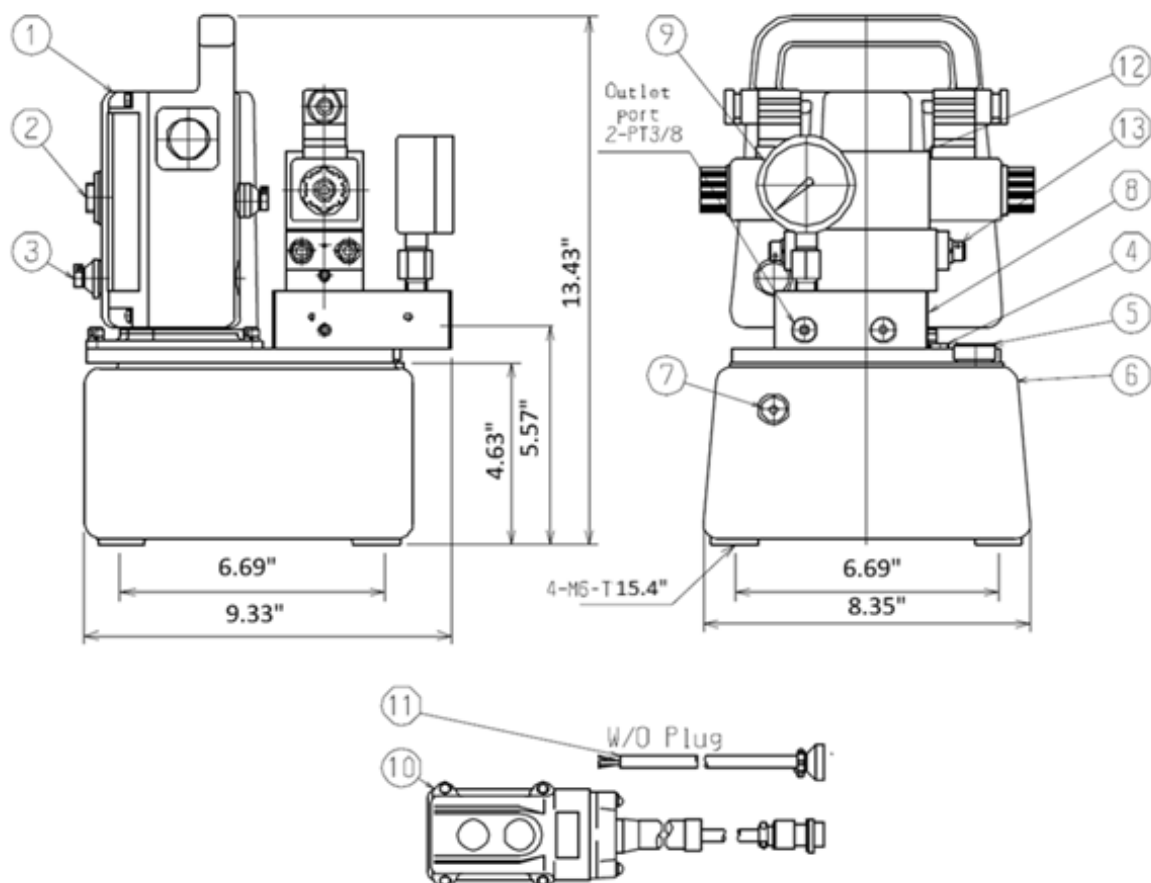

| Item | Description            |
|------|------------------------|
| 1    | Electric motor         |
| 2    | Metal plug socket      |
| 3    | Power supply plug      |
| 4    | HP relief valve        |
| 5    | Oil plug               |
| 6    | Reservoir              |
| 7    | Oil gauge              |
| 8    | Delivery port block    |
| 9    | Pressure gauge         |
| 10   | Pendant switch         |
| 11   | Power cable 8ft / 2.5m |
| 12   | 4-way solenoid valve   |
| 13   | Pilot valve            |

## 9.0 Electric Schematic

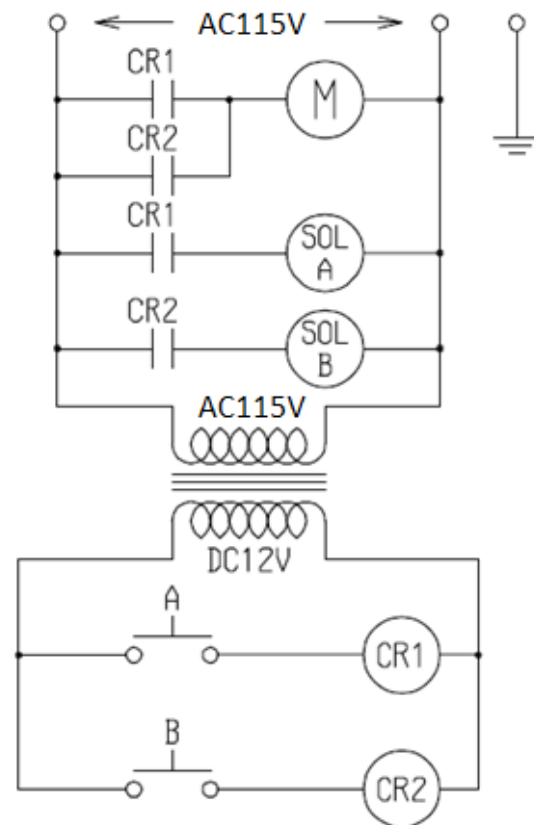

## 10.0 Hydraulic Schematic

